



## Modify time mode


① From 12H mode to 24H mode

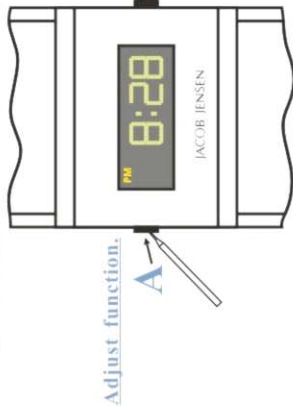


Set up and make sure function.

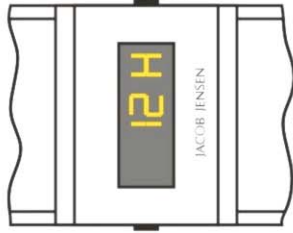

Press the B button and modify time mode. Make 12H become 24H.

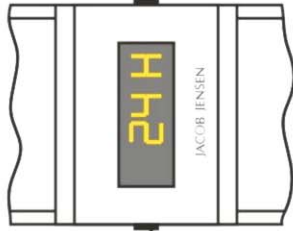

Press the A button to make sure.

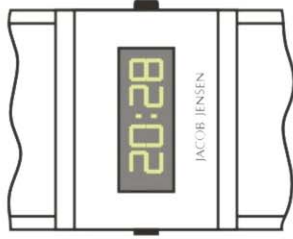


Finish


② From 24H mode to 12H mod




Press the A button about 3 seconds using a pin to 24H flicker.

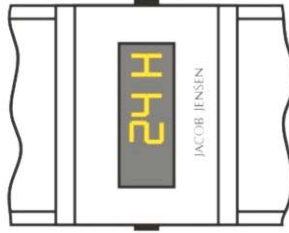

Press the B button and modify time mode. Make 24H become 12H.

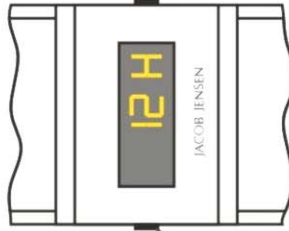


Press the A button to make sure.

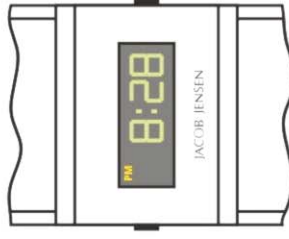


Finish.

## From time to date

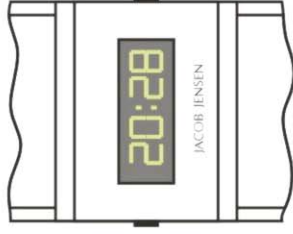


Press the B button about 3 seconds, time turn to date.

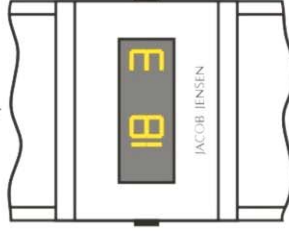


Finish.


## Adjust hour, minute, month, date

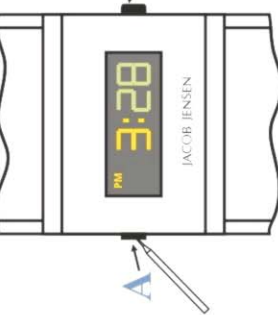


Press the A button using a pin. hour become flicker, follow press B button, modify hour to required number and press A button to make sure.

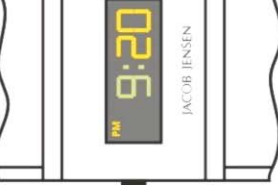

Following the minute become flicker, next press B button, modify minute to required number and press A button to make sure.

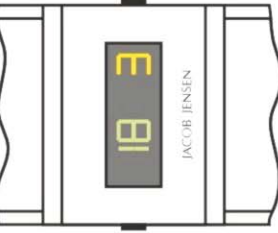


Following the month become flicker, next press B button, adjust month to required month and press A button to make sure.

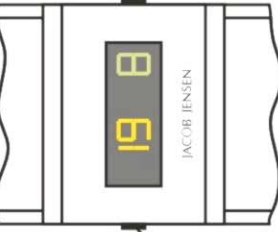

Following the date become flicker, next press B button, adjust date to required date and press A button to make sure.

From 18th/March turn to 19th/Aug

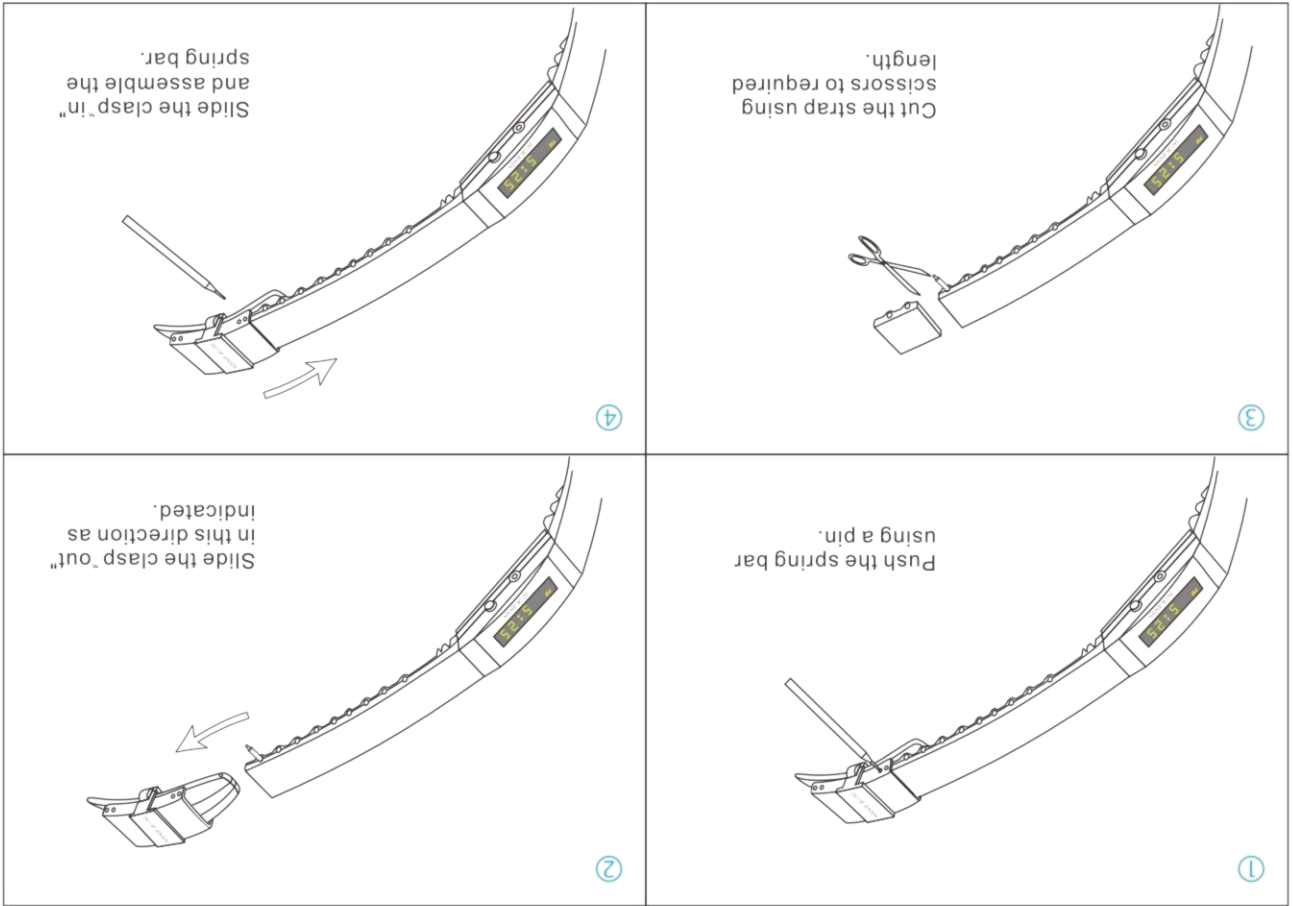

# JACOB JENSEN

## GENTS DIGITAL WATCH